



## PLD LOC PLD-LOC Fitting Insertion Instructions

1

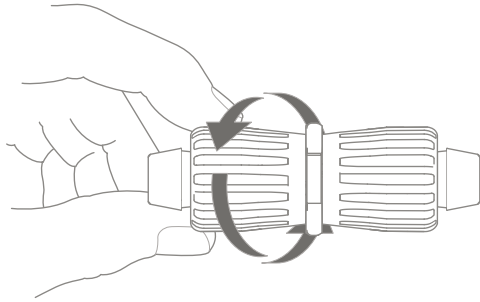


Twist collar toward center of fitting.

2

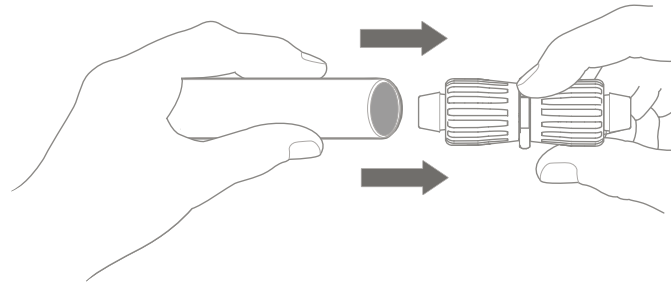

Slide dripline or tubing over exposed barbed fitting.

3

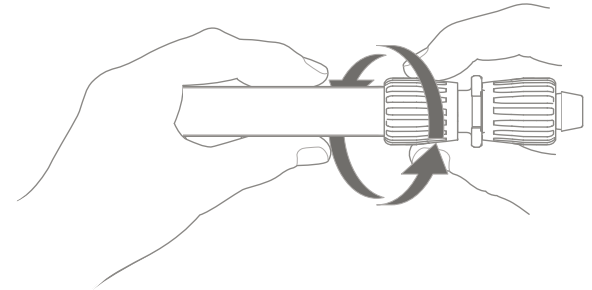

While holding tubing, twist collar to secure tubing.



Need help? Visit [hunter.direct/pldhelp](https://hunter.direct/pldhelp)